DAVIS

RANGER SERIE 1350

User Manual

GENERAL DESCRIPTION

MIYOTA quartz movement Caliber OS20
Functions : Hours, minutes, seconds, chronograph and date.

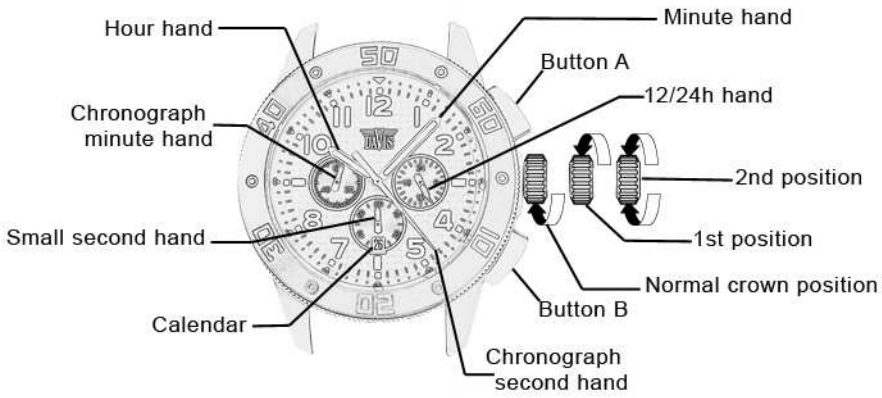

GENERAL USE

To unscrew the crown in normal position, turn it anticlockwise.

Setting the time
Pull the crown out to the 2nd position.
The small second hand stops.
Adjust the hour by turning the crown in the desired direction.
When the crown is pushed back to the normal position, small second hand begins to run.

Setting the date
Pull the crown out to the 1st position.
Turn the crown clockwise to set the date.
When the date is correctly set push back the crown on normal position. Important : Date setting MUST UNDER NO CIRCUMSTANCES be carried out between 22.00 h (10 P.M.) and 2.00 h (2 A.M.).

Use of the chronograph
This chronograph is able to measure and display time in 1/1 second united up to maximum of 59 minutes 59 seconds.
Measuring time with chronograph
Button A :
1st pressure : sets off the time measurement. Chronograph second hand begins to run. 2nd pressure : stops the time measurement. Chronograph second hand stops.
Button B :
(To use only when the chronograph has stopped).
Only one pressure reset the chronograph hand second to zero.

Resetting the starting position of the chronograph second hand
Pull the crown out to the 2nd position.
Push button A to set position of the chronograph second hand.
Once the hand has been set push back the crown on normal position.

Water resistance
Your watch is waterproof 50 meters. Once the setting finished, screw the crown back in order to guarantee perfect water resistance. For this, push the crown to normal position by turning clockwise simultaneously. The crown and buttons must never be handled under water.

Maintenance
It is advisable to rinse the watch and its strap carefully with fresh water after contact with sea water. It also recommended that the water resistance of your watch is serviced every two years